

Snelstart 500RX2WAY – Pager Instellen


Snelstartgids voor het opladen, aanmelden en instellen van de 500RX2WAY polspager

1. Voorbereiding: Opladen & Aanzetten

- 1 Opladen:**
Laad de pager eerst op met de bijgeleverde lader aan de zijkant.
- 2 Aanzetten:**
Druk de schakelaar aan de zijkant 3 seconden in en laat deze los als het display aangaat.


LET OP!

Zorg dat het laadsnoer met magnetisch contact **geen metaal of andere laadsnoeren** aanraakt!

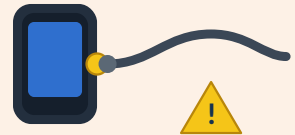


2. Pager Aanmelden bij het Systeem (Study)

- 1 Menu openen:**
Kies in het display **MENU** (onderaan het scherm) en voer de pincode in.

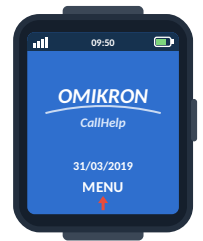

- 2 Zenders-menu:**
Kies in het displaymenu rechts het "hand"-symbool voor Zenders.

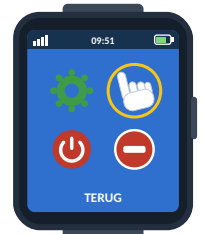

- 3 Study kiezen:**
Kies daar "Study".



- 4 Pager oproepen:**
Roep de pager op met de **400TX** en het gewenste pagernummer, of met de **500TXBTTN**.
- 5 Bevestiging:**
Het display toont **TIP succes**. Daarna zijn de systeemcode en het pagernummer bij Study zichtbaar.

3. Berichtteksten Instellen (Name)

1 Naar "Name":

Ga in het Zenders-menu naar "Name".



2 Berichtcode kiezen:

Toets bovenaan het scherm op het **driecijferige getal**. Toets dan het gewenste nummer in, bv **001**, om het tekstbericht bij code 001 te zien en/of te wijzigen.



Instelmenu verlaten

Om het instelmenu te verlaten drukt u op de schakelaar aan de zijkant.

4. Testmodus

In de stand **Test** kunt u de systeemcode, het oproepnummer en de boodschapcode uitlezen. In samenwerking met de **400TX / RP / 500TXBTTN / 500RX2WAY** kunt u hiermee ook het bereik testen.

5. Extra Instellingen (System Settings)

Gaat het scherm te snel uit om bijvoorbeeld met **Name** tekstberichten te wijzigen? Dan kunt u dit instellen; de standaardwaarde is **15**. Hoe korter de tijd, hoe langer de batterij meegaat.

Kies in het displaymenu links het **"tandwiel"-symbool** voor System Settings.



Instelling	Toelichting
Backlight Tijd	Stel bv tijdelijk in op 240 ; zet dit na het instellen weer terug naar 15 .
Auto Clear Time	De blokkeertijd voor een zelfde oproep. Houd dit op minimaal 35 – 45 seconden in verband met herhaalde oproepen door steunzenders/noodknop.
Volume	Kies het geluidsniveau.
Prompt Mode	Kies voor buzzer, trillen, led en het aantal herhalingen.
Tijd / Datum	Voer in zoals aangegeven (met bv 12.47.00 uur voor de tijd).

Scherf aan tijdens instellen

Instellingen kunnen alleen gewijzigd worden als het scherm aanstaat. Gaat het scherm te snel uit? Zet **Backlight Tijd** dan op **240** en daarna weer terug naar **15**, zodat de batterij het langst meegaat.

6. ALERT Noodknop Setup

1 Setup-menu openen:

Ga naar het rechter setup-menu en voer de pincode in.

2 Naar ALERT:

Ga naar **ALERT** in het menu. (Stel hier ook de display-aan-tijd en de silent mode in.)

3 Code invoeren:

Kies **INVOER** en voer in: systeemcode + pagernummer + boodschapcode.

Bijvoorbeeld **123 100 004** om pager **100** op te roepen met berichtcode **004** (agressie).

4 Herhalen:

Op deze wijze kunt u alle **4 noodknoppen** instellen.

Zelfde systeemcode gebruiken

Kies **dezelfde systeemcode** als de andere pagers en/of repeaters!

Meer informatie

Raadpleeg de **uitgebreide handleiding** voor meer informatie en om instellingen verder te wijzigen.

Quick Start 500RX2WAY – Pager Setup

Quick start guide for charging, registering and configuring the 500RX2WAY wrist pager — English version

1. Preparation: Charging & Switching On

1 Charging:


First charge the pager using the supplied charger on the side.

2 Switching on:

Press and hold the switch on the side for 3 seconds and release it when the display switches on.

ATTENTION!


Make sure the charging cable with magnetic contact does **not touch any metal or other charging cables!**

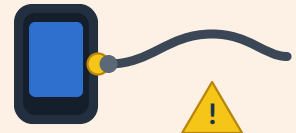

2. Registering the Pager with the System (Study)

1 Open the menu:

On the display, select **MENU** (at the bottom of the screen) and enter the PIN code.

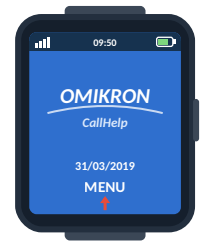

2 Transmitters menu:

In the display menu, select the **"hand" symbol** on the right for Transmitters (*Zenders*).



3 Select Study:

There, select **"Study"**.



4 Call the pager:

Call the pager using the **400TX** with the desired pager number, or using the **500TXBTNN**.

5 Confirmation:

The display shows **TIP success**. After that, the system code and pager number are visible under Study.

3. Setting Message Texts (Name)

1 Go to "Name":

In the Transmitters (*Zenders*) menu, go to "Name".



2 Select message code:

At the top of the screen, tap the **three-digit number**. Then enter the desired number, e.g. **001**, to view and/or change the text message for code 001.



Exiting the settings menu

To exit the settings menu, press the switch on the side.

4. Test Mode

In **Test** mode you can read out the system code, call number and message code. In combination with the **400TX / RP / 500TXBTTN / 500RX2WAY** you can also use it to test the range.

5. Additional Settings (System Settings)

Does the screen switch off too quickly, for example when changing text messages with **Name**? You can adjust this; the default value is **15**. The shorter the time, the longer the battery lasts.

In the display menu, select the **"gear" symbol** on the left for System Settings.



Setting	Explanation
Backlight Time	For example, temporarily set it to 240 ; after configuring, set it back to 15 .
Auto Clear Time	The blocking time for an identical call. Keep this at a minimum of 35 – 45 seconds because of repeated calls from repeaters / the emergency button.
Volume	Select the sound level.
Prompt Mode	Select buzzer, vibration, LED and the number of repetitions.
Time / Date	Enter as indicated (e.g. 12.47.00 for the time).

Screen on while configuring

Settings can only be changed while the screen is on. Does the screen switch off too quickly? Then set **Backlight Time** to **240** and afterwards back to **15**, so the battery lasts as long as possible.

6. ALERT Emergency Button Setup

- 1 Open the setup menu:**
Go to the right-hand setup menu and enter the PIN code.
- 2 Go to ALERT:**
Go to **ALERT** in the menu. (Also set the display-on time and silent mode here.)
- 3 Enter the code:**
Select **INPUT** (*INVOER*) and enter: system code + pager number + message code.
For example **123 100 004** to call pager **100** with message code **004** (aggression).
- 4 Repeat:**
In this way you can configure all **4 emergency buttons**.

Use the same system code

Select **the same system code** as the other pagers and/or repeaters!

More information

Please refer to the **extended manual** for more information and to change settings further.