

Snelstart 500RX2WAY – Pager in gebruik

Snelstartgids voor de drager: opladen, aan- en uitzetten, alarmen ontvangen en een noodoproep versturen

1. Opladen, aanzetten & uitzetten

1 Iedere dag opladen:

Laad de pager elke dag op met de bijgeleverde lader. Het laadsnoer klikt met een magnetisch contact aan de zijkant vast.

LET OP!

Het laadsnoer met magnetisch contact mag **absoluut geen kortsluiting** maken. Zorg dat het contact **geen metaal of andere laadsnoeren** raakt. Gebruik de **bijgeleverde afstandhouder / opbergklem** voor het snoer zolang de pager niet is aangesloten.



2 Aanzetten:

Houd de knop aan de zijkant ingedrukt totdat het display oplicht en laat de knop dan los.



3 Uitzetten:

Druk kort op de knop aan de zijkant; het hoofdmenu verschijnt. Kies daar linksonder het **aan/uit-symbool** (rode cirkel met aan/uit-teken) om de pager uit te zetten.



Instellingen wijzigen

Het instelmenu is beveiligd met een pincode. Wilt u iets aangepast hebben, zoals berichtteksten, geluid of de noodknop? Neem dan contact op met uw beheerder of installateur.

2. Een alarm ontvangen

1 Signaal:

Bij een oproep geeft de pager een signaal (geluid, trilling en/of led, afhankelijk van de instelling) en verschijnt het bericht op het display.

2 Lezen en handelen:

Lees het bericht en onderneem de gepaste actie.

3 Niets wissen:

U hoeft niets in te drukken. De oproep stopt vanzelf, en een nieuwe oproep komt er gewoon boven te staan.



3. Een noodoproep versturen (ALERT)

Uw beheerder heeft de pager op één van de twee onderstaande manieren ingesteld.


A. Automatische noodknop

1 Noodknop:

Houd de noodknop aan de zijkant **1 seconde** ingedrukt. De noodoproep wordt verstuurd.

2 Met vertraging:

Is er een vertraging ingesteld, dan ziet u een aftelvierkant op het display (bv. 3, 2, 1) met **Cancel**. Zolang het aftellen loopt, kunt u de oproep nog annuleren met **Cancel**.

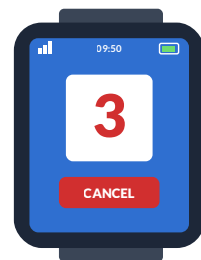

B. Oproepmenu met 4 keuzes

1 Oproepmenu openen:

Druk kort op de knop aan de zijkant; het hoofdmenu verschijnt. Kies rechtsonder de **rode zwaailamp**. Of houd de knop aan de zijkant ingedrukt, zodat het oproepmenu direct opent (alleen als de automatische noodknop niet is ingesteld).



2 Vier vlakken:

U ziet een groot blauw scherm, verdeeld in 4 vlakken met de ingestelde oproepen, bijvoorbeeld **RECEPTIE NOOD**, **MELDEN RECEPTIE**, **BHV ONTRUIMEN** en **BHV OEFENING**.

3 Kiezen:

Tik op het vlak van de oproep die u wilt versturen.



Dagelijks in het kort

- Pager **elke dag opladen**; snoer daarna in de opbergklem.
- Bij een alarm: **bericht lezen en handelen**, niets wissen.
- Noodoproep: **noodknop 1 seconde** indrukken of via de zwaailamp het juiste vlak kiezen.
- Per ongeluk? Tijdens het aftellen op **Cancel** drukken.

Quick Start 500RX2WAY – Using the Pager

Quick start guide for the wearer: charging, switching on and off, receiving alarms and sending an emergency call – English version


1. Charging, switching on & off

1 Charge every day:

Charge the pager every day using the supplied charger. The charging cable attaches to the side with a magnetic contact.

ATTENTION!

The charging cable with magnetic contact must **never cause a short circuit**. Make sure the contact does **not touch any metal or other charging cables**. Use the **supplied spacer / storage clip** for the cable whenever the pager is not connected.

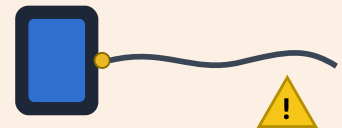


2 Switching on:

Press and hold the button on the side until the display lights up, then release it.



3 Switching off:

Briefly press the button on the side; the main menu appears. Select the **on/off symbol** (red circle with power sign) at the bottom left to switch the pager off.

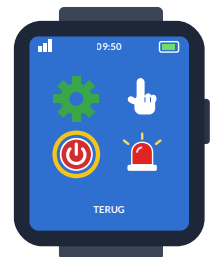

Changing settings

The settings menu is protected with a PIN code. Would you like something changed, such as message texts, sound or the emergency button? Please contact your administrator or installer.

2. Receiving an alarm

- 1 Signal:**
When a call comes in, the pager gives a signal (sound, vibration and/or LED, depending on the setting) and the message appears on the display.
- 2 Read and act:**
Read the message and take the appropriate action.
- 3 Nothing to clear:**
You do not need to press anything. The call stops by itself, and a new call simply appears on top.




3. Sending an emergency call (ALERT)

Your administrator has set up the pager in one of the two ways below.


A. Automatic emergency button

- 1 Emergency button:**
Press and hold the emergency button on the side for **1 second**. The emergency call is sent.
- 2 With delay:**
If a delay has been set, a countdown square appears on the display (e.g. 3, 2, 1) with **Cancel**. While the countdown runs, you can still cancel the call with **Cancel**.

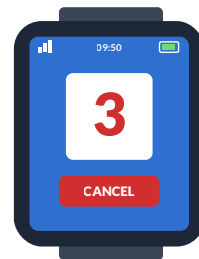

B. Call menu with 4 options

- 1 Open the call menu:**
Briefly press the button on the side; the main menu appears. Select the **red beacon** at the bottom right. Or press and hold the button on the side to open the call menu directly (only if the automatic emergency button has not been set up).
- 2 Four fields:**
You see a large blue screen divided into 4 fields with the configured calls, for example **RECEPTIE NOOD**, **MELDEN RECEPTIE**, **BHV ONTRUIIMEN** and **BHV OEFENING**.
- 3 Choose:**
Tap the field of the call you want to send.

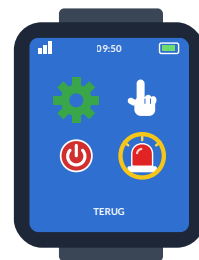

Daily use at a glance

- Charge the pager every day; afterwards, put the cable in the storage clip.
- On an alarm: read the message and act, nothing to clear.
- Emergency call: hold the **emergency button for 1 second** or choose the right field via the beacon.
- By accident? Press **Cancel** during the countdown.