


Our people are safe. We have a CallHelp.



# CallHelp<sup>®</sup> 400

Paging system with repeaters

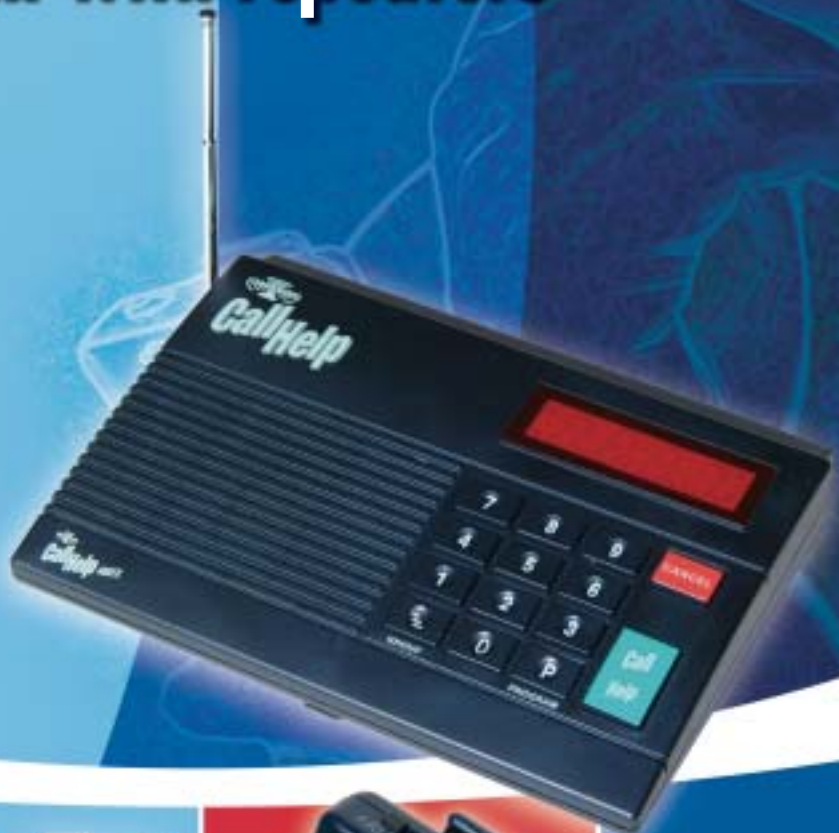


## Omikron CallHelp 400

The Omikron CallHelp 400 is a wireless UHF paging system, of which the transmission range can be extended with maximum 99 repeaters.

Every repeater has a range of 300 meter in a open area or 3 story's in a office building (indication), which makes a theoretical transmission range of 30 kilometer in open area's or 300 story's in a office building possible.

The repeaters are easy too install. A power outlet is all you need. There is no need for mounting cables or other expensive installation work.

There are no monthly subscription fees.

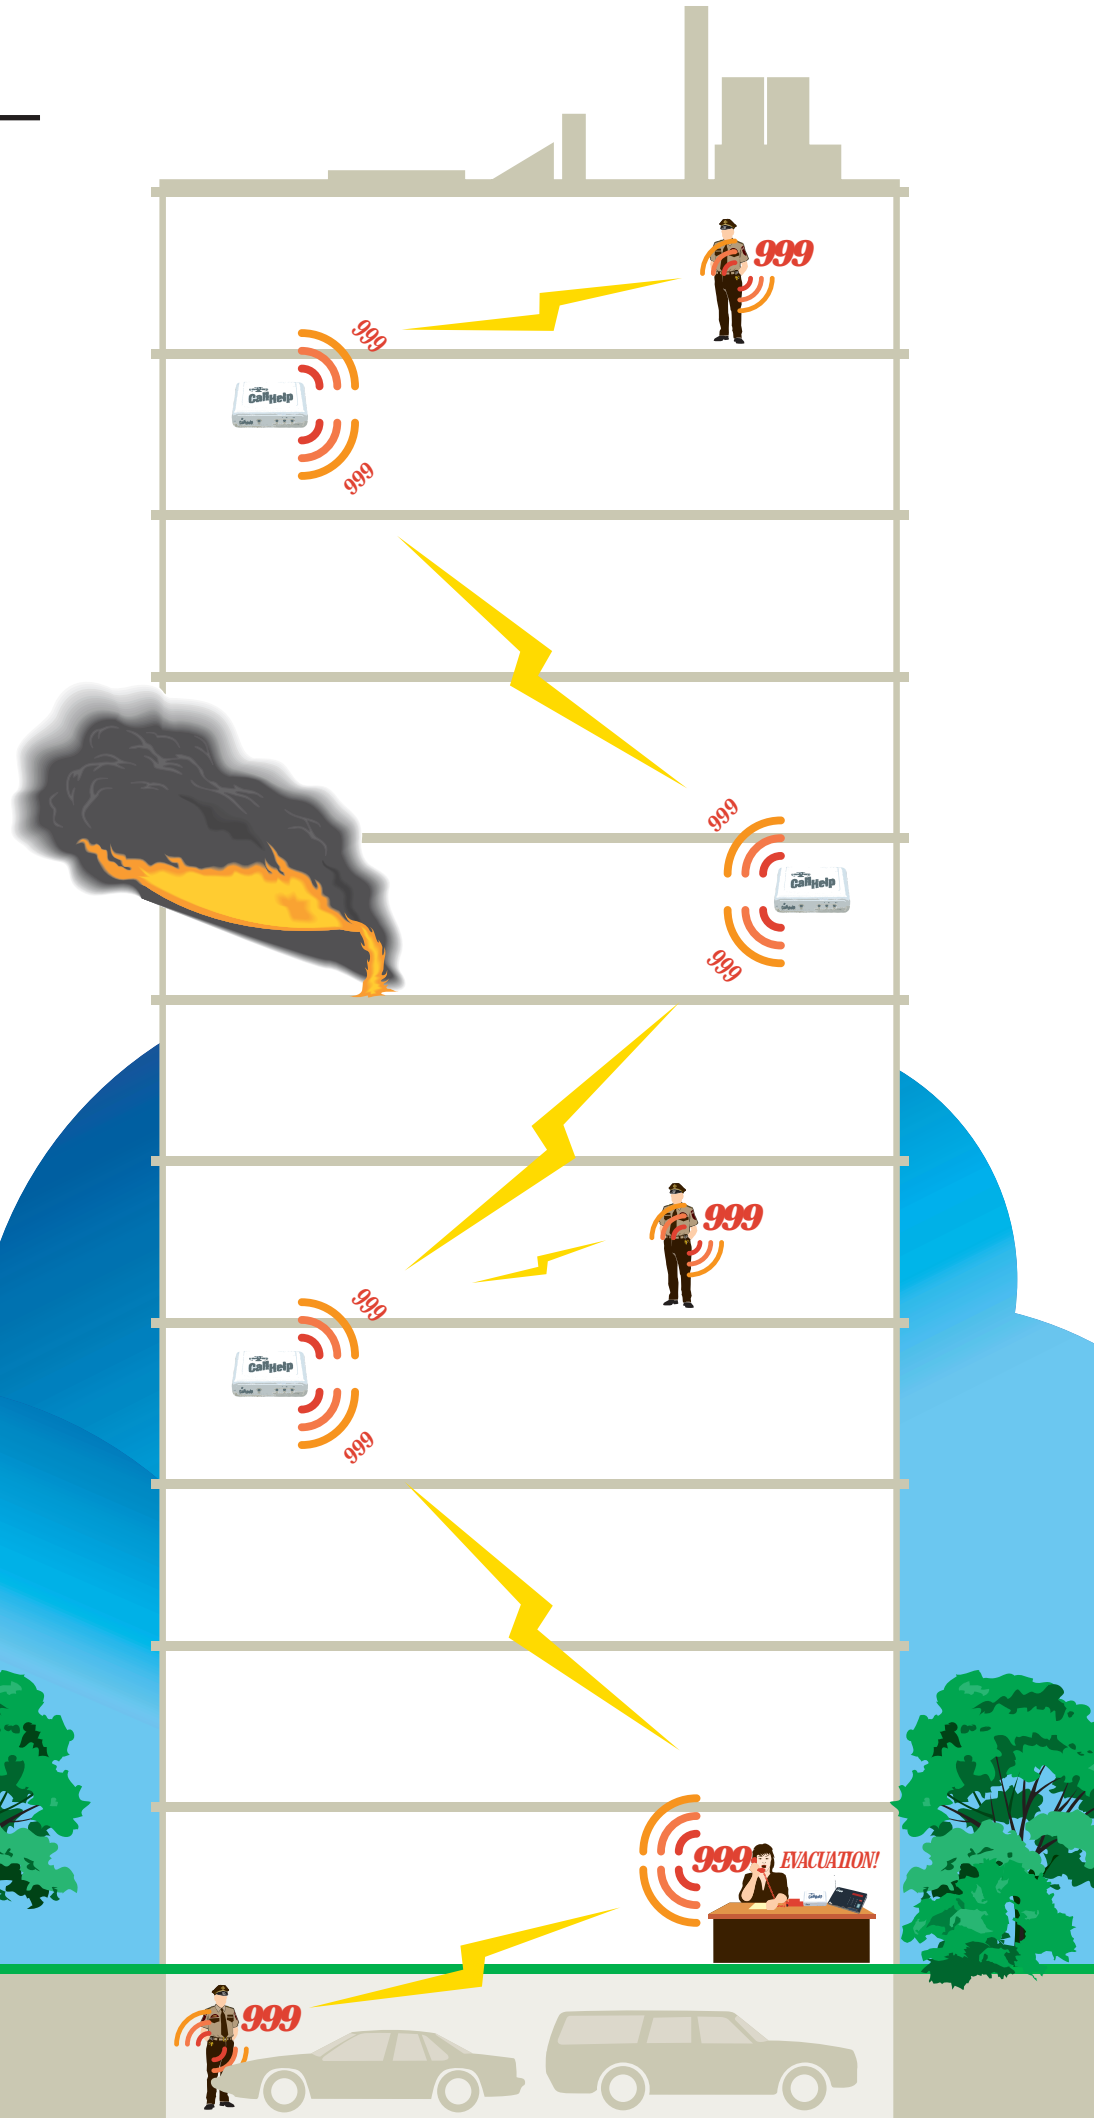



## Omikron CallHelp 400TX

The Omikron CallHelp 400TX is the operating station of the system, which can operate in 4 ways:



- As 9L (one touch operation). Press key "3" and all receivers will be paged with a "3" in the display. Press key "7" and all receivers will be paged with a "7" in the display.
- As 9LPlus (one touch operation). Press key "3" and receiver 3 will be paged, press key "7" and receiver "7" will be paged.
- As 99L Can page maximum 99 receivers individual, in groups or collective. In the display of the receiver appears a one digit message code.
- As 999L Can page maximum 999 receivers individual, in groups or collective. In the display of the receiver appears a 3 digit message code.

The Omikron CallHelp 400TX has a built-in backup battery and modular connections for the Omikron CallHelp 400TC and the Omikron CallHelp 400ET.

## Omikron CallHelp 400RX

The Omikron CallHelp 400RX is the receiver of the system. It can be paged in vibration or "beep" mode. In the display appears a one or three digit message code, depending on the operation mode. One battery charge is enough for 2 to 4 weeks of operation.



A protecting carrying soft case 400LC is also available.

## Omikron CallHelp 400C6

The Omikron CallHelp 400C6 is a desktop charger which can charge 6 receivers simultaneously or alone. The charger can also be mounted on a wall.



## Omikron CallHelp 400RP

The Omikron CallHelp 400RP is the repeater of the system. The transmission range is 300 meter in open areas or 3 stories in an office building (indication). The repeater has an internal backup battery. There can be maximum 99 repeaters in a system.



## Omikron CallHelp 400TC

The Omikron CallHelp 400TC connects the operating station to a telephone system and/or pc\*. Connected to a telephone system, paging can be done from every extension unit. Connected to a pc, the control panel appears on the pc screen. Paging is done with the "mouse". \* With optional CallHelp400CS.



## Omikron CallHelp 400ET

The Omikron CallHelp 400ET is a free-programmable 32 key and contact interface. The keys are connected to a contact strip on the pcb for connecting potential-free N/O contacts. For example, contacts from a fire detection unit, service-desk alarms or doctors' offices.



## Omikron CallHelp 400CS


The Omikron CallHelp 400CS is a software- and cable-set for connecting the CallHelp 400TC to a personal computer.



## Some applications

### • Emergency assistance

Every company should have an emergency assistance team, this team should be able to operate with a quick paging system for quick reactions.

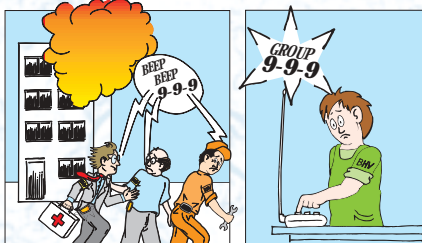


### • Schools & University's

A school does not only page the emergency response team with a CallHelp 400. In combination with the CallHelp 400ET push buttons can be placed in every classroom for paging assistance.

### • Governemental institutions

There can be situations at the service desk, which needs security assistance.

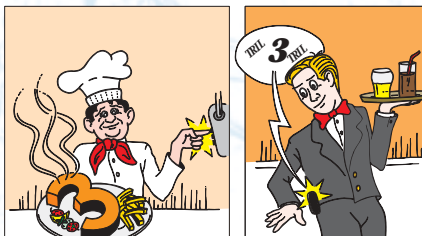

### • Restaurants

The kitchen staff pages the waiter when the order is ready to be served.

### • Holiday parks


Personal and medical assistance are everywhere within reach for clients.

### • Distribution centers

On arrival the truckdriver gets a receiver, which will notify him if his shipment is ready for loading/unloading. In the display of the receiver appears the number of the loading dock.

### • Zoo, attraction parks

Because the range of the Omikron CallHelp 400 serie can be expanded with repeaters, the wide operation area's of these companies is no longer a problem.

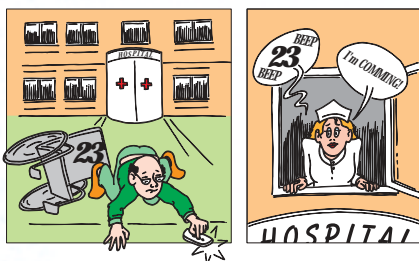


### • Healthcare

A patient pages the nurse. The same is applied for:

### • Home nursing

The patient can page the roommate or neighbours.

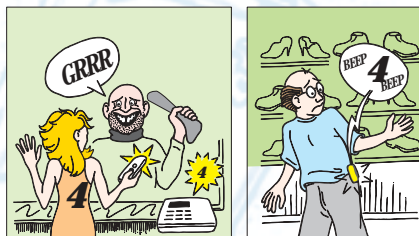

### • Shop keepers alarm system

All shops can page each other with their shop number in the receiver display.

### • Shopping mall


Security is always within range.

### • Social service alarm

There can be a situation which needs assistance.


### • Cold stores, metal shielding

By placing repeaters, 100% coverage is possible.

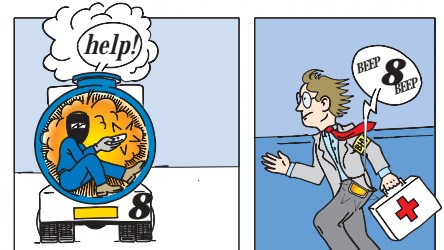

### • Assistance with dangerous work

Security can be reached in case of emergency's.

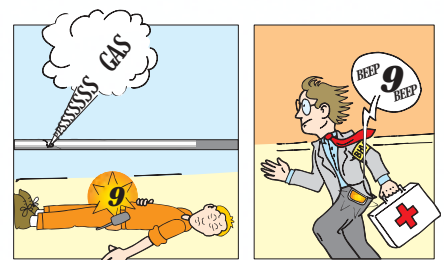


### • Soloworkers

at risk can page for assistance.

### • Child nursery day care center

Can page staff or parents.

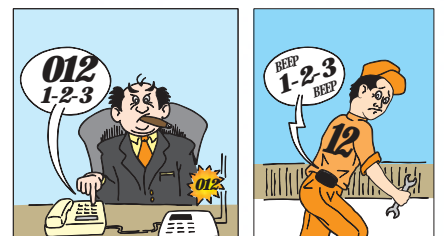

### • Hotels

Page personal for service.

### • Supermarkets

Page counter assistance.

### • Car parks

with multiple stories are everywhere in range.

Your dealer:

